



How to use our PLTS Pole Spacing Tool

Fold A When printing this PDF, make sure that Page Size/Scaling is set to "None", "Actual Size" or "Off". Check the reference squares to the right to make sure the printout is accurately printed.

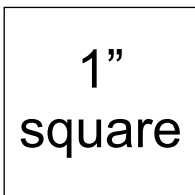

B To make it easier to measure the pole spacing, sharply fold the paper on the dotted line in the order shown...A, B, C and D.

A pickup's pole spacing is the center to center distance between the two outside (E to e) pole screws. Line up the dashed line with the center of the pole screws to find out your pickup's pole spacing.

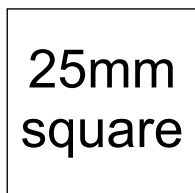

It is a good idea to measure all of the pickups since they might have different pole spacing.